


## Brick and Masonry Applications

Use a combination of masonry fasteners and PL Premium Adhesive to fasten Fypon products to brick or masonry structures. Countersink the fasteners and apply a non-shrinking filler in the indentations. Allow the wood filler to cure, then sand filled area flush. Touch up with paint.

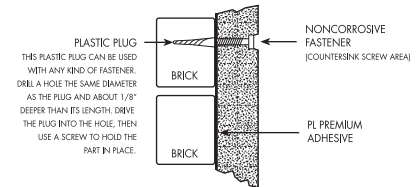

## Finishing Options

Moulded of high-density urethane foam, Fypon moulded millwork products have an in-mold barrier coat, which becomes an integral part of the urethane foam as it cures.

After each piece is moulded and trimmed, we apply an exterior grade white primer paint with a built-in ultraviolet stabilizer.

Our products are impervious to moisture, so painted surfaces are not subject to the degree of chipping and peeling common with painted wood. Also, they are not subject to decay or insect damage.

### PAINTING

Fypon products may be painted with any good quality latex or oil base paint. Usually one coat is all that is needed.

### FAUX FINISHES

Our products are also suitable for many faux finishing techniques, including sponging, feathering, and antiquing using either oil base or latex paints.

### WHITE COLOR MATCH – AVAILABLE AT SHERWIN-WILLIAMS®

To better service our customers nationwide, we have worked with Sherwin-Williams® to formulate a color and sheen match for our white paint that is applied at the factory. You can take this formulation to your local Sherwin-Williams dealer.

Formulation: Superior Exterior, Satin Latex

Paint Gallon Base: A89W51  
 LI - 1/64  
 WI - 6 oz.  
 NI - 1/128  
 Y3 - 1/128  
 R1 or R4 - 1/64

### STAINING

Fypon products that are noted as Woodgrain/Stainable may be stained. Apply a good quality, nonpenetrating stain (ZAR,™ Olympic Overcoat,™ etc.) with a 2" natural bristle brush. Begin applying stain in a circular motion, then feather the stain in the direction of the grain. For a darker finish, apply a heavy coat of stain with light pressure. For a lighter finish, apply a thin coat of stain with more pressure.

### USING CORROSION-RESISTANT FASTENERS AND PL PREMIUM ADHESIVE

Always use corrosion-resistant mechanical fasteners (nails or screws) and PL Premium Adhesive when installing Fypon products. This combination provides a secure, long lasting bond. Countersink all fasteners about 1/8 inch and fill with exterior grade white spackle. If desired, sand any minor imperfections and topcoat with a quality exterior latex or oil base paint. Fypon exterior millwork installations should be finished using a quality, exterior grade silicone caulk to prevent water infiltration behind siding, windows and doors. Some exterior millwork installations, in particular new construction (before siding is applied) may require a J-channel and/or flashing to prevent water infiltration. Installers must determine which installation technique is best for the specific situation.

### IMPORTANT:

Please read these installation guidelines thoroughly before beginning installation. Please note that these guidelines are provided only to assist with the installation of mouldings and millwork products. Modified procedures may be required in order to meet specific situations, unique applications and local building codes. The manufacturer does not under any circumstances warrant the installation of its products. Be sure to wear appropriate protective clothing, gloves and safety glasses when working with any tools. Installer should check for and relocate all electrical wiring within the proposed installation area, as needed (be sure to disconnect all electric power before working with any electrical wiring and follow all applicable local electrical codes and safety procedures).